

How to modify the IP of the front-end camera on NVR

Description: This document will show you how to modify the IP of the front-end camera on NVR


Note: This feature is not supported in all NVR and cameras, and is subject to the actual product.

Prerequisites: NVR and cameras support this feature


Section 1: How to modify on IE

The location of the feature

- 1.1 Click the following steps: Configure > digital channel > digital channel
- 1.2 If there is no display device in the above IP Address, please click the "Search" button, if it is not displayed, it means that there is no connected device.

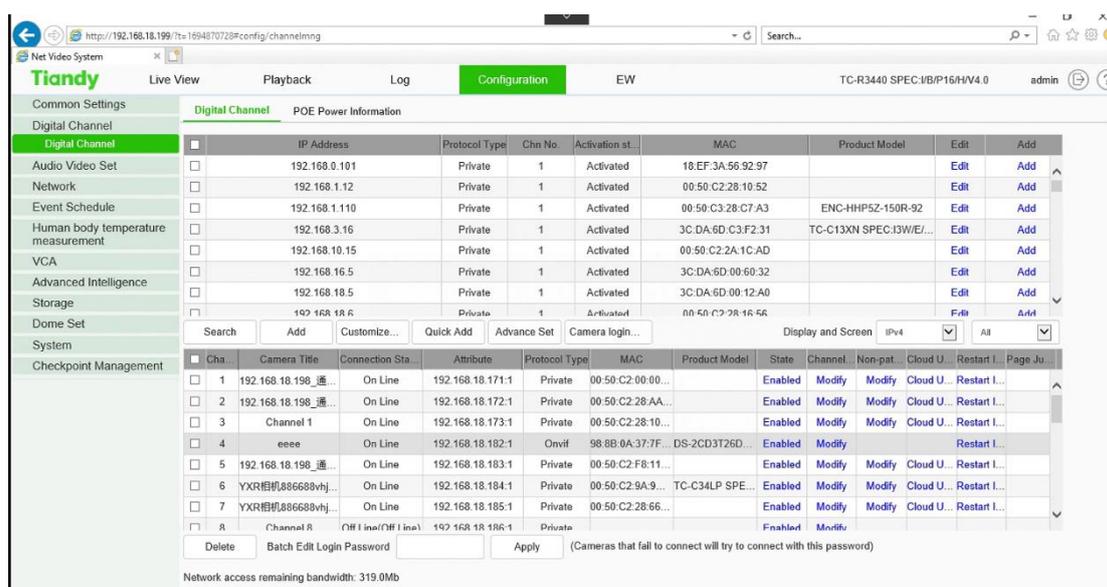


- 1.3 Check the "Edit" button after the IP you want to change

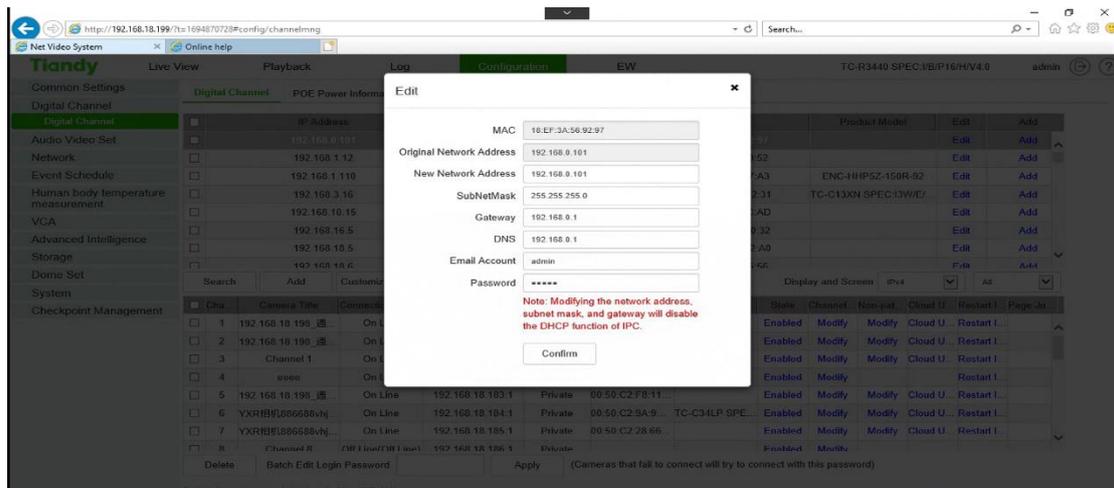

1.4 Fill in the correct account and password of IPC to modify the IP address of IPC.

Section 2 How to modify on UI

1.1 Click the following steps: Configure > digital channel > digital channel

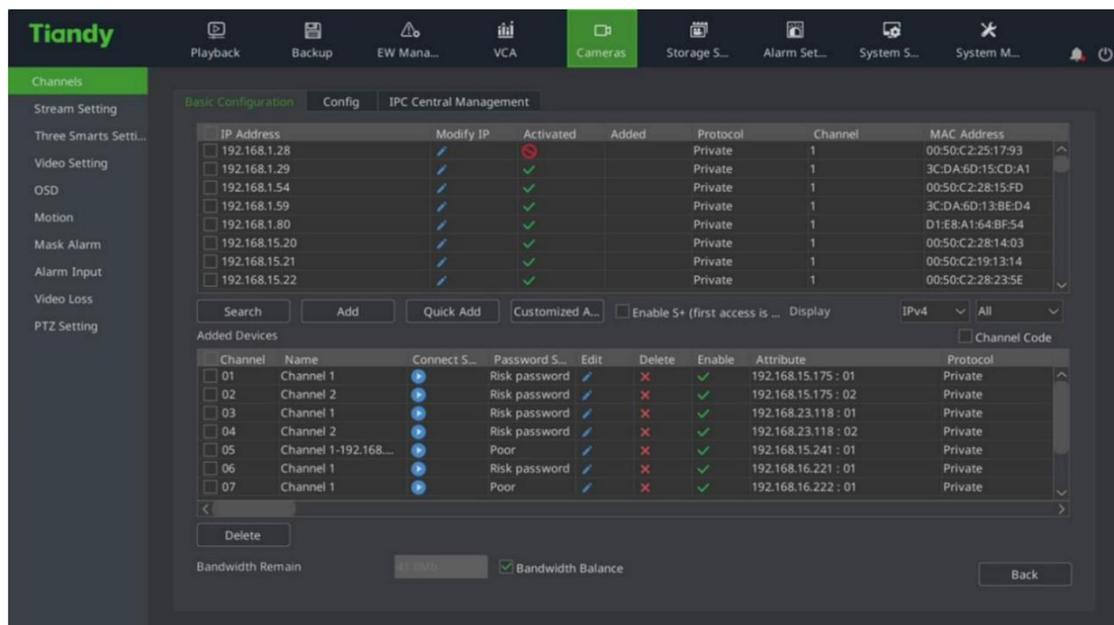

1.2 Click "Search" to begin searching. Search results are automatically sorted by IP address. You can modify the IP front end in the search results

list. Click  to display the modify IP interface, as shown in the figure below.

Edit ✕

| | |
|----------------|------------------|
| Channel No. | 01 Channel 1 |
| Protocol | Private Protocol |
| Connect mode | IPv4 |
| Device Address | 192.168.15.175 |
| Port No. | 3000 |
| Proxy IP | |
| Device Channel | 01 |
| User | admin |
| Password | ***** |
| Decryption | |

Confirm Cancel