

Tiandy Technologies Co., Ltd.

How to use Easy7 trigger nvr alarm output

Description: This document will show you how to use Easy7 trigger nvr alarm output

Prerequisite: The network device need supports the alarm output function.

Section 1 How to add an alarm output

Tian	dy	Home page	System configuration	Device management	Live View			200 0	Ů − ₫ × 22.42:33
(Common f	unctions							
		Live View View the live images at the point	e monitoring	Playback Search and play the recording file a the monitoring point	a.	Device management Add, modify and delete groups	(System configuration Typical operation on client configuration	
		Alarm management Real-time indication of uni message to facilitate acce exception	t alarm ss to unit	TV Wall TV wall configuration, preview, offin switch settings		Inlet and outlet management Face management, human gate re time preview and information query	, ai- /	ElectronicMap Management and operation function of electronic map	
E	Basic func	tions							
	mana	User Operation	on logs Data statistics	Alarm configuration	Irch Face rec	gnition			

1.1 Click the "Device Management" function in the red box

Tiandy	Home page	System configuration		ent Liv	ve View			2000 600-0× 22.43.09
Device Grou								
Encode device (0)	Q Auto Search	+ Add 🖉 Modify	Delete	Invert Selection	ORefresh			
E Decoding device (0)		Name	Device Type		IP address	Video Channel	Connection status	Operation
📾 Gate equipment (0)								
				Add Device				
				Add Mode				
					☑ Off-line Add			
				Device Name	test			
				Device IP	192.168.18.73			
				Port	3000			
				User Name	admin			
				Password	•••••			
				Video Channel				
				Alarm Input				
				Alarm Output	6			
					Import to Group			
					Add Cancel			

1.2 Add a device and enter the correct alarm output port.



Tiandy Technologies Co., Ltd.

Tiandy		~	300 0 - C ×
Home page System cont	figuration Device management	Live View	
Device Croup	L Modify Group	+ Add Group	
Device List	Customized List		
Q			٩
 # 192-168 18 73-Channel 33 # 192-168 18 73-Channel 34 # 192-168 18 73-Channel 35 # 192-168 18 73-Channel 35 # 192-168 18 73-Channel 37 # 192-168 18 73-Channel 39 # 192-168 18 73-Channel 49 # 192-168 18 73-Channel 40 	Alingont /Alingont /Alingont More spend More down		

1.3 Select Grouping

Tianc	ly				
	Home page	System configuration	Device management	Live View	
Device	Group Sync to device Of Get Device N	C Get alarm port	A Modify Group	+ Add Group	
	Device List	٩	Customized List		٩
	🗆 📄 🥽 My device		🗆 📄 Device List		
	🕀 🔲 test		🗉 🗖 🖿 test		
	🗌 🏩 192.168.18.73-Channe				
	🗌 🔮 192.168.18.73-Channe				
	🗌 😤 192.168.18.73-Channe				
	192.168.18.73-Channe				
	🗌 🔮 192.168.18.73-Channe	15 L Expo	nt		
	192.168.18.73-Channe	16			
	🗌 💮 192.168.18.73-Channe	H 7 Move upv	vard		
	9 192.168.18.73-Channe	H 8			
	192.168.18.73-Channel				
	9 192.168.18.73-Channe				
	🗌 🔮 192.168.18.73-Channe				
	9 192.168.18.73-Channe				
	9 192.168.18.73-Channe				
	192.168.18.73-Channe				
	🗌 💮 192.168.18.73-Channe				

1.4 Open the Device drop-down list

Tigndy				~		
manay	Home page	System configuration		Live View		
Device						
ft Sy	nc to device Get Device N.	C Get alarm port	A Modify Group	+ Add Group	🕆 Delete Group	
	evice List		Customized Lis			
		4				
	🗌 🔮 192.168.18.73-Cha	annel 33	🕀 📄 🖿 Device			
	📄 🍨 192 168 18 73-Cha	nnel 34	🗉 🗖 🖿 test			
	🗌 😤 192.168.18.73-Cha	annel 35				
	📃 🔮 192.168.18.73-Cha	innel 36				
	🔲 🔮 192.168.18.73-Cha	annel 37				
	🗌 🔮 192.168.18.73-Cha	annel 38				
	🗌 🔮 192.168.18.73-Cha	innel 39	⊈ Export			
	🗌 🔮 192.168.18.73-Cha	innel 40				
	🗌 🛦 192.168.18.73-Alar	min 1 🔛	we upward			
	🗌 🔥 192.168.18.73-Alar	min 2				
	🔲 🎄 192.168.18.73-Alar	min 3	OVE COMIT			
	🗌 🥼 192.168.18.73-Alar	min 4				
	🗌 🧄 192.168.18.73-Alar	min 5				
	🔲 🏠 192.168.18.73-Alar	mOut 1				
	🗌 🏠 192.168.18.73-Alar	mOut 2				
	🔲 🏠 192.168.18.73-Alar	mOut 3				
	🗌 🏠 192.168.18.73-Alar	rmOut 4				
	🗌 🎄 192.168.18.73-Alar	mOut 5				

1.5 Select the alarm output port you want to add



Tian	dy ,	lome page	System config	uration Dev	ice management	↓ Live View		3 0 0 5 0 − 0 ≥ 22.45.1	× 1
Device	dy Group	Come page Cont Device N. 192 (66.15.73-Chain 192 (66.15.73-Chain 192 (16.15.73-Chain 192 (16.15.73-Chain 193	System config Oct any port and 33 and 33 and 34 and 55 and 55 and 55 and 55 and 55 and 56 and 57 and 58 and 58 a	Pimport Pimport de Capart More spant Voire down	Le management	Live View + Ast Group t List mod	Dreek Grap		
		192.168.18.73-Alarm	Out 5						

1.6 Select the folder you want to move into

Section 2 How to turn on the alarm output function

				v	100 AU-0×	
Tiandy	Home page	System configuration	Device management			
Device LSt	a					
Favorites	< 					

2.1 Select whether to turn on the alarm output according to the red box prompt in the figure.