

## How to set alarm snap shot

**Description:** This document will show you how to set alarm **snapshot**

**Prerequisites:** Camera NVR APP

### Section 1: How to set alarm snap shot on camera


- 1.1 Install the TF card on the device and hard disk format.
- 1.2 Click configuration→event schedule→event management button.
- 1.3 Click linkage mode and select the snapshot linkage method save it.



1.1

1.2


1.3

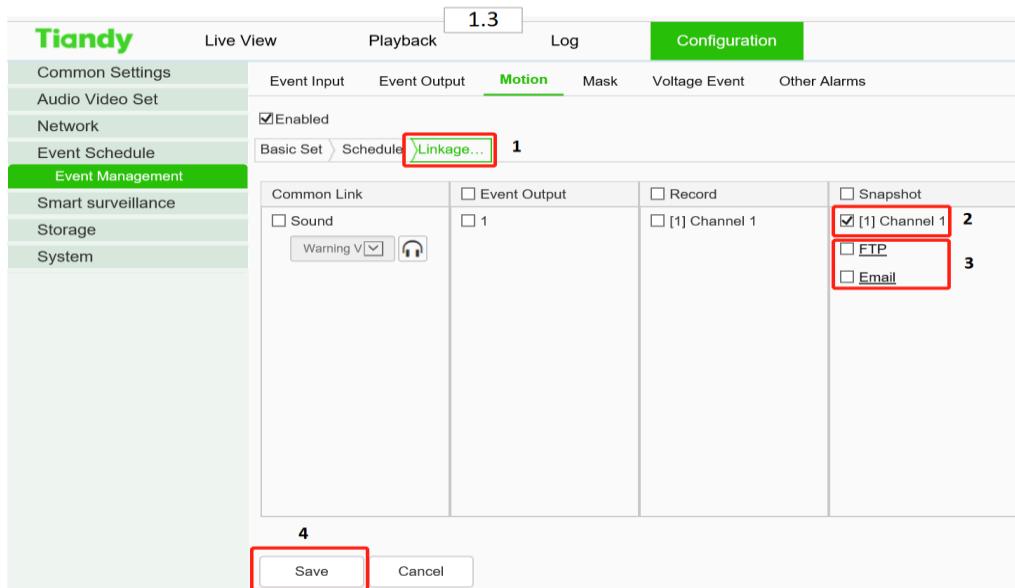


## Section 2: How to set alarm snap shot on NVR

2.1 Click configuration → event schedule → event management button.

2.2 Click linkage mode → select mode (motion) → select channel → save

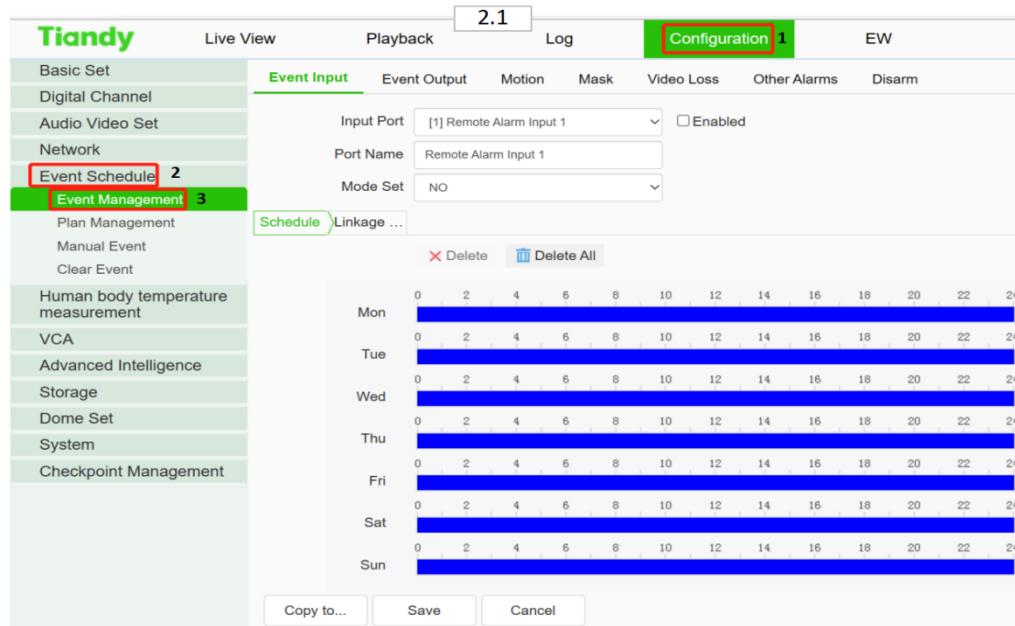

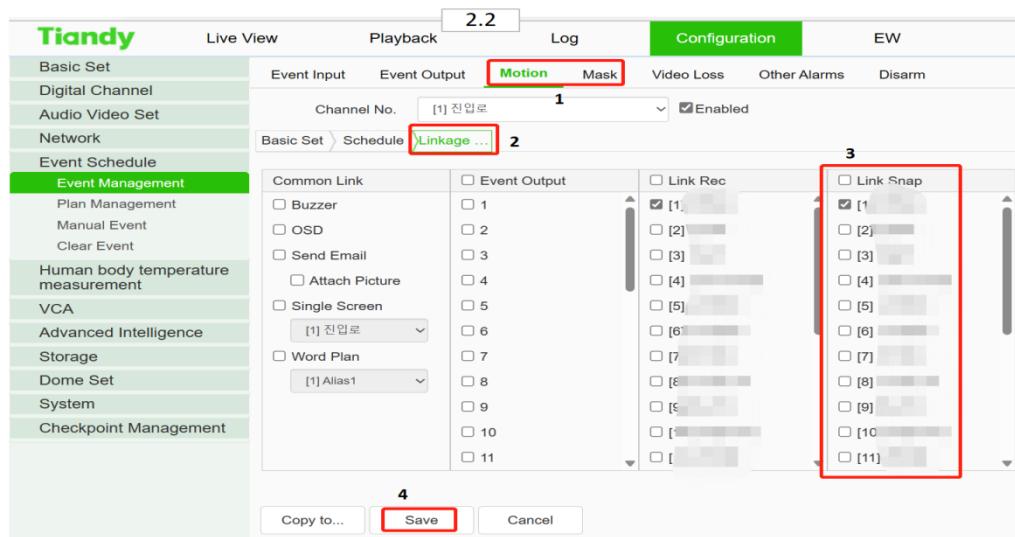

## Section 3: How to set alarm snap shot on Easy Live Plus

- 3.1 Enter Easy Live Plus select Camera click configuration
- 3.2 Click Alram Settings enter next page
- 3.3 Click Video motion alram enter next page
- 3.4 Click Linkage capture and save setting ok

3.1

Device List Sort ▾

Common Device

eye

Configuration

pro-5440 通道 08

Playback Stop More

3.3

Alarm settings

- Video motion alarm
- Video block alarm
- VCA alarm
- Port alarm

3.2

Car Configuration

eye  
483562C2405A00151

Channel name: pro-5440\_通道 08

Alarm and message: Alarm settings

- Message notification
- Storage
- Local record
- Audio and video adjustment
- Fill light settings
- Audio adjustment
- Video encryption
- Advanced configuration
- Universal
- Device detection and upgrade
- System settings

Delete Device

3.4

Mobile alarm settings

Open state: On

Arming time:

- Time period 1: 00:00 ~ 23:59 On
- Time period 2: 00:00 ~ 00:00 On
- Time period 3: 00:00 ~ 00:00 On
- Time period 4: 00:00 ~ 00:00 On

Copy to: Linkage capture

Linkage video

Sensitivity: 14

Save