

How to set alarm notification in Easy Live Plus APP

Description: This document will show you how to use Easy Live Plus APP to set alarm notification in your phone.

Prerequisites: Easy Live Plus APP


Section 1: How to set alarm notification

1. Device configuration setting


1.1 Click configuration button.

1.2 Click message notification button.

1.3 Open the device offline alarm and the device alarm enable push button.

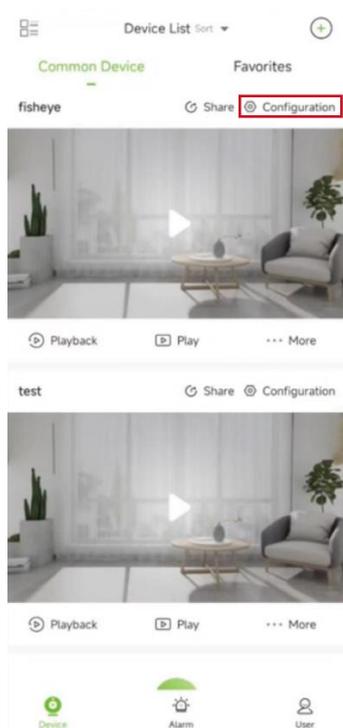

1.1

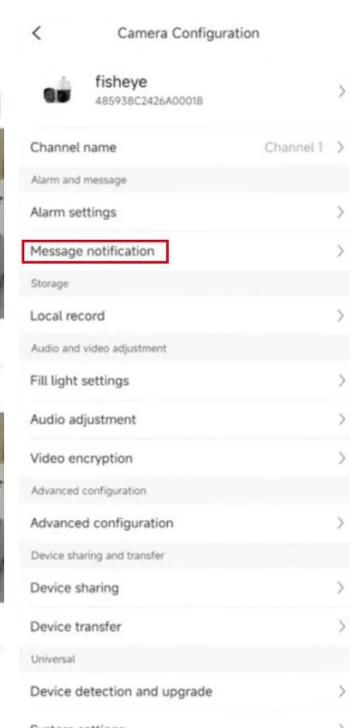

1.2




1.3


2. Local configuration setting

2.1 Click local configuration button.

2.2 Open the Receive alarm locally button. It will automatically switch to the phone settings interface.

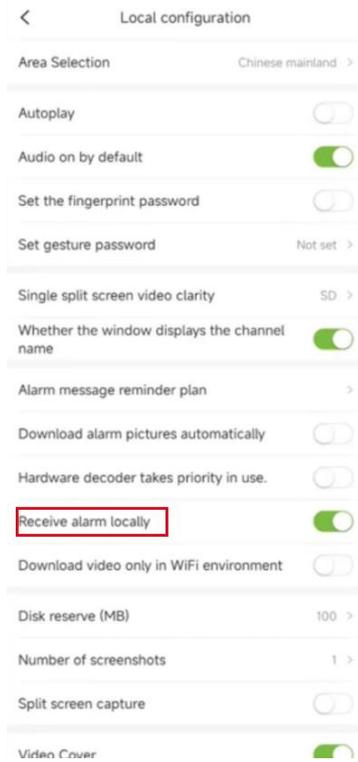



2.1

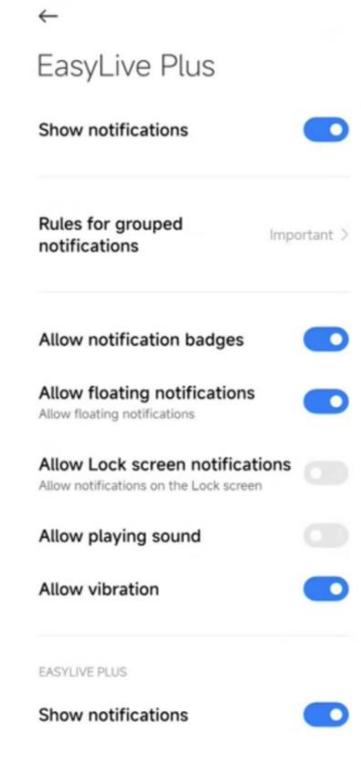

2.2

3. Alarm message reminder plan

3.1 In alarm message reminder plan function, you are able to set the time period for which you want to receive alarm notifications.

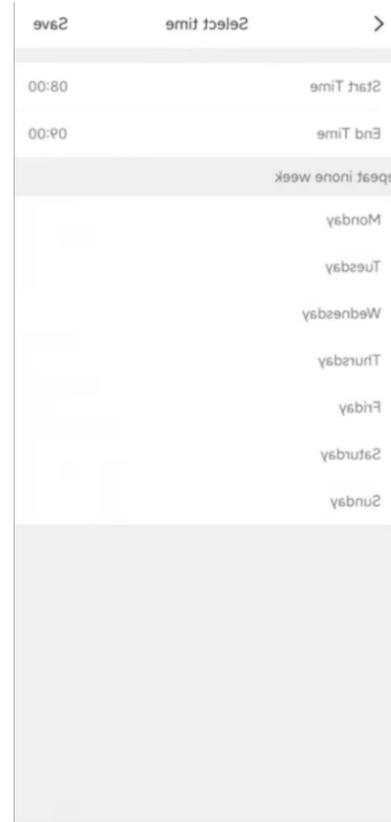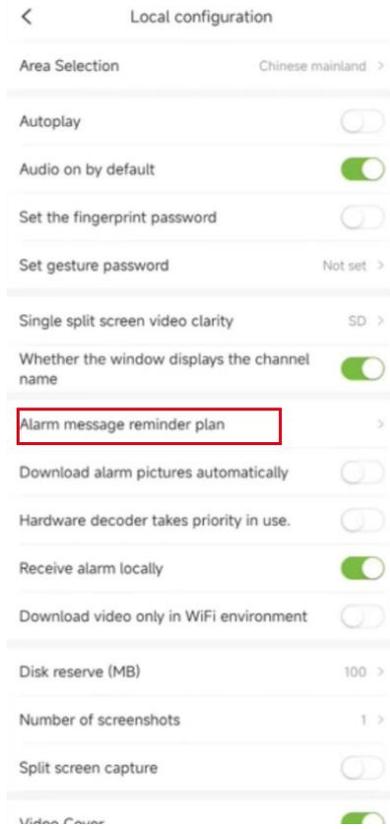

3.1